ARAT Telephone mount

Type: CHRYSLER JEEP
model 2002 onwards

Part No: 1253.1

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

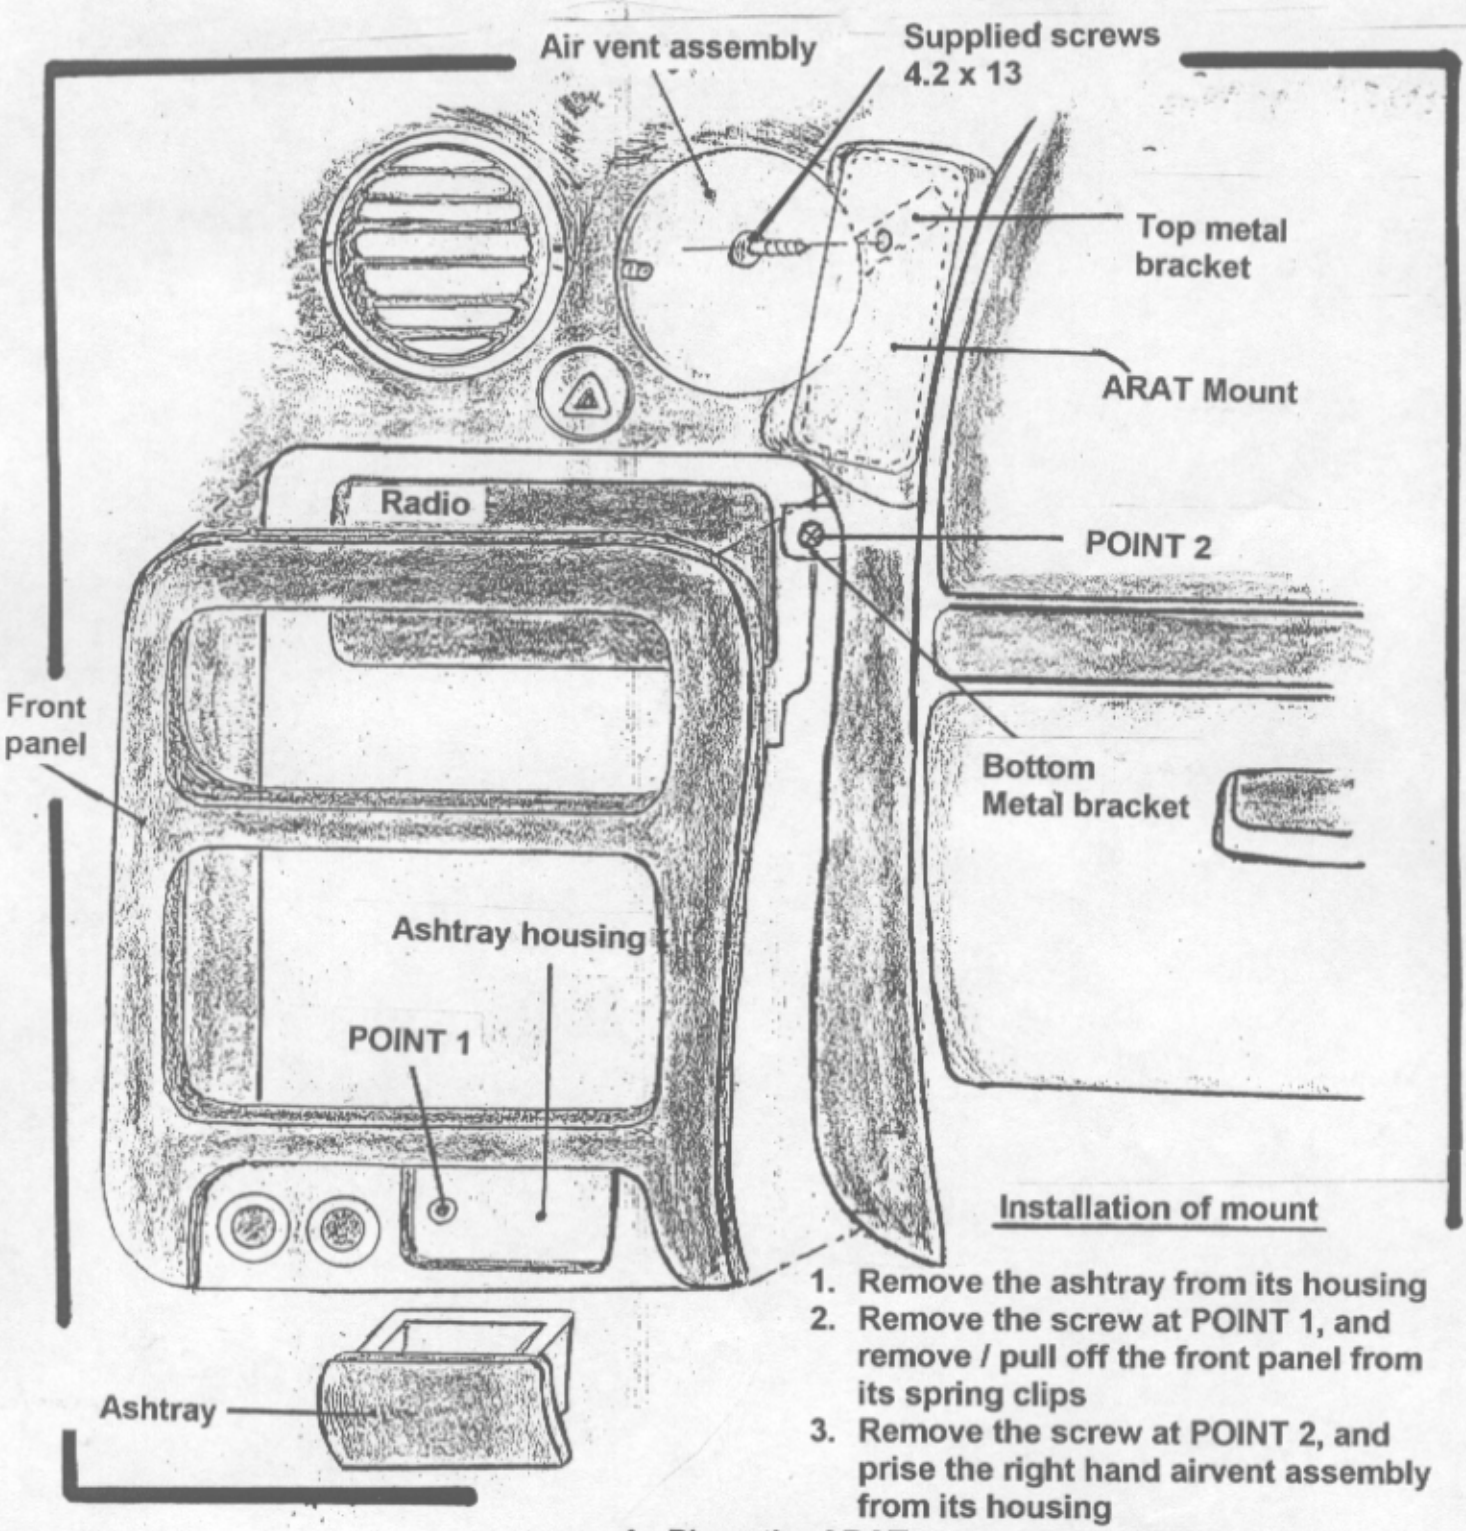

Installation of mount

1. Remove the ashtray from its housing
2. Remove the screw at POINT 1, and remove / pull off the front panel from its spring clips
3. Remove the screw at POINT 2, and prise the right hand airvent assembly from its housing
4. Place the ARAT mount to the contours of the dashboard, and place the top metal bracket between the airvent assembly and the air channel.
5. Secure the mount through the bottom metal bracket at POINT 1 with the previously removed screw
6. With the supplied screw 4.2 x 13 through the top metal bracket in the side wall of the of the air channel (pre-drill Ø 2mm)
7. Replace the airvent assembly and the front panel.